



USER MANUAL

VITALITY 4D

MASSAGE CHAIR



Designed with advanced 4D SL-Track and zero-gravity technology.


TABLE OF CONTENTS

TABLE OF CONTENTS	1
MASSAGE CHAIR COMPONENTS	2
GETTING STARTED	3
KEY FEATURES – LUXX VITALITY 4D	4
LCD PANEL SCREEN REMOTE	5
a. Functions and Instruction Guide (6 - 11)	
i. Basic Controls (6)	
ii. Direction Controls (7)	
iii. Air Pressure Controls (8)	
iv. Automatic Modes (9)	
v. Manual Modes (10-11)	
QUICK SHORTCUT REMOTE DIAGRAM	12
a. Functions and Instructions	13
AI VOICE CONTROL – INSTRUCTION GUIDE	14
a. Part Two	15
VITALITY 4D DIMENSIONS & SPECIFICATIONS	16
a. Part Two	17
SAFETY GUIDELINES	18
a. Notice and Maintenance	19
b. LCD Panel Screen Remote Precautions	20
TROUBLESHOOTING	21
WARRANTY AND SUPPORT	22



This manual will guide you through setup, operation, and maintenance to ensure you enjoy the full benefits of your new Luxx Vitality 4D Massage

MASSAGE CHAIR COMPONENTS

MAIN COMPONENT NAMES AND FUNCTIONS

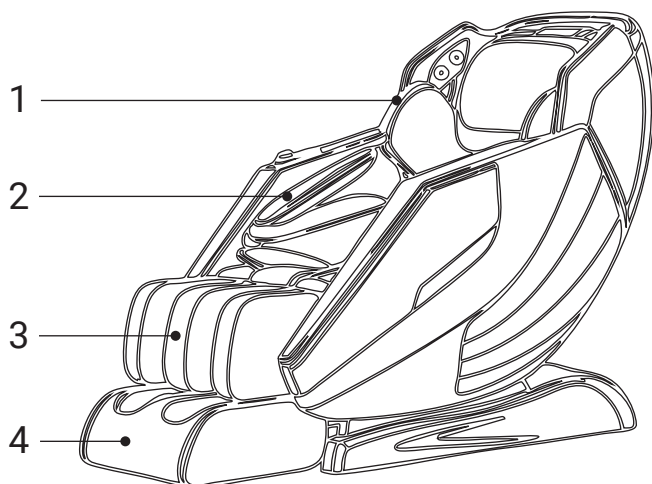

1. Shoulder airbags
2. Arm airbags
3. Leg airbags
4. Foot roller
5. Power box
6. Moving wheel
7. Power cable socket
8. Fuse seat (Fuse: AC250V/F5AL)
9. Power switch

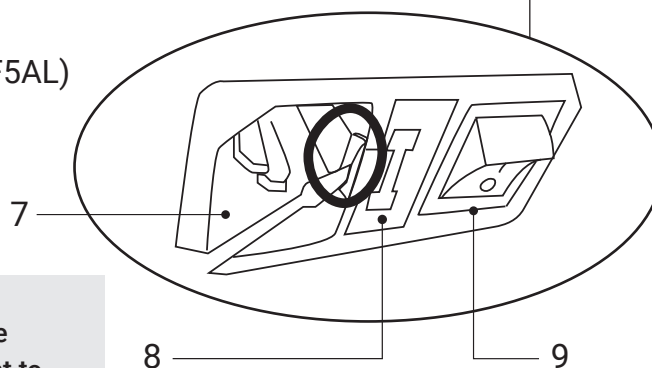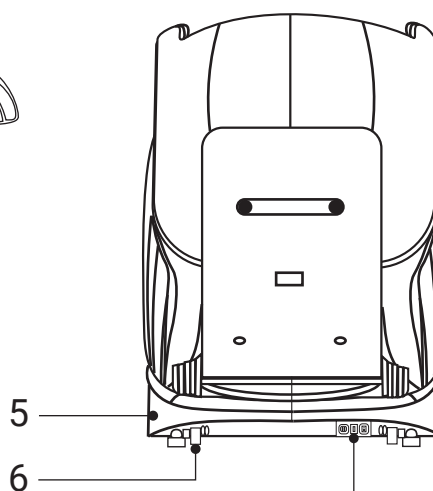

Note: When replacing the fuse, gently use the appropriate tool to pry open the compartment to access and remove the fuse box.


GETTING STARTED

UNBOXING AND PLACEMENT

- i. Carefully remove the chair from the packaging, and unfold the leg rest from the seat.
- ii. Tilt the chair back at a 45° angle, then carefully push the foot wheels forward or backward until the chair is in the appropriate position.
- iii. Position it at least 10-30cm from walls or furniture to ensure the chair can function properly with the legs and back free to move up and down. Place the chair down gently.

POWER ON

- i. Check for any hazards before use
- ii. Connect the power cord securely to a grounded outlet.
- iii. Turn the Power Switch on (it will light up) located on the back of the chair near the floor. Press the power button on the LCD Display Panel to power on.

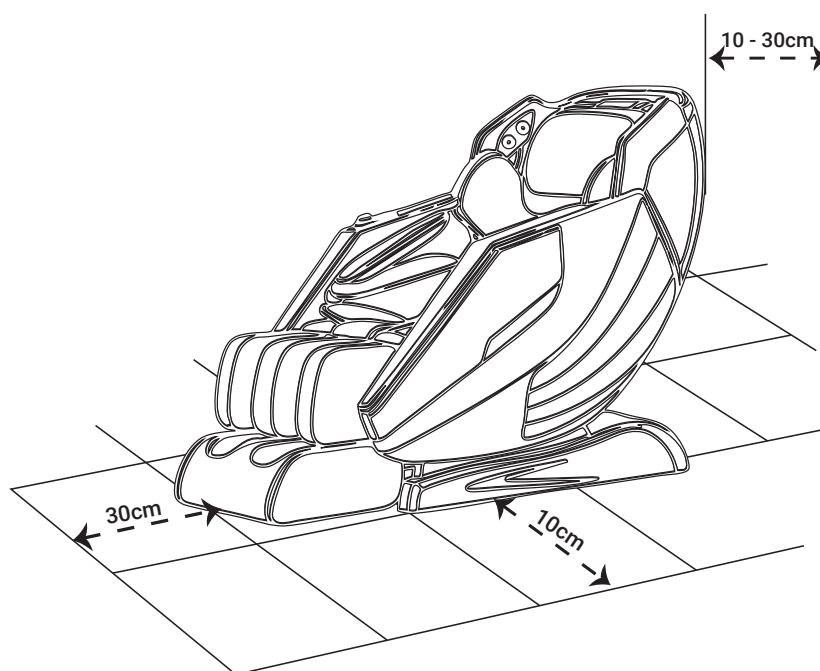

KEY FEATURES

LUXX VITALITY 4D

4D MASSAGE ROLLERS

The 4D massage feature offers a dynamic experience with rollers that move up, down, side to side, and in and out. It adjusts in speed and the intensity which provides a deeper, and a more tailored massage that mimics the human touch.

12 AUTOMATIC & 6 MANUAL MASSAGE SELECTIONS

Choose from 12 pre programmed automatic massage geared to a specific focus or manually choose between 6 manual swedish and shiatsu massage techniques and combinations.

ZERO GRAVITY RECLINE

The zero gravity feature elevates your legs to heart level, reducing pressure on your spine and promoting relaxation. This position helps overall circulation and provides a weightless experience, enhancing the effectiveness of your massage.

AI BODY SCANNING TECHNOLOGY

When the power is turned on, this advanced feature detects your unique body shape and automatically adjusts the massage zones, ensuring a tailored and personalized massage experience.

AIR COMPRESSION SYSTEM

Full-body airbags strategically target the shoulders, arms, legs, and feet. This provides a soothing, compressive massage which enhances the ultimate relaxation and body circulation.

HEAT THERAPY


Lumbar heating enhances ultimate relaxation to your lower back by soothing muscles and promoting comfort.

BLUETOOTH SPEAKERS

Connect your device to enjoy immersive sound, elevating your massage experience with music or audio of your choice. Discoverable as "AMY".

LCD PANEL SCREEN REMOTE


DIAGRAM OF SCREEN REMOTE

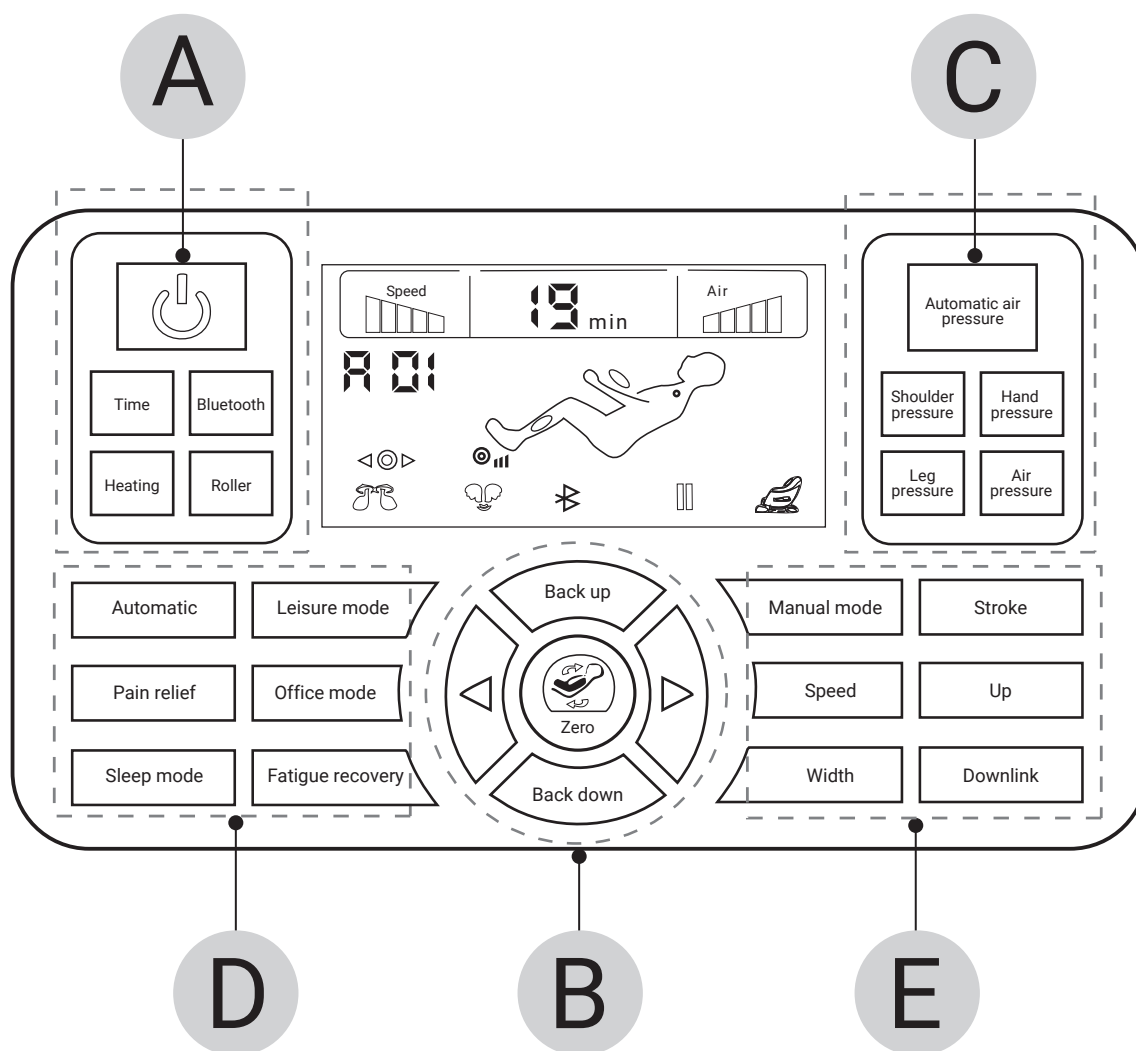

(see next page for screen remote functions)

LCD PANEL SCREEN REMOTE


FUNCTIONS & INSTRUCTION GUIDE

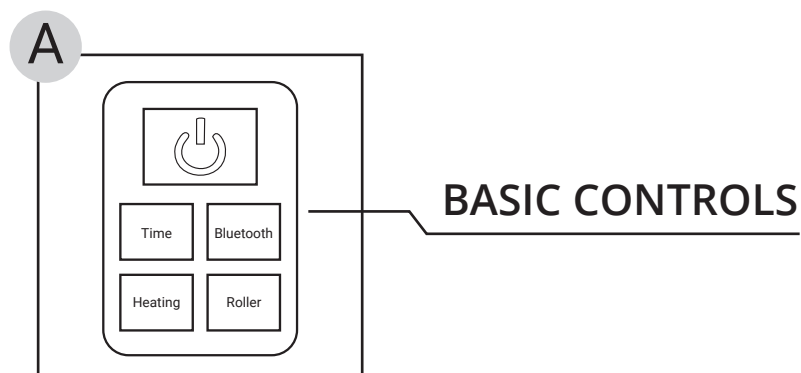

Button	Voice Commands	Functions
Power		Press once: power on Press again: pause / resume <u>Hold down</u> : power off
	Power On	Power on <i><u>Body scanning</u>: once powered on, the chair automatically scans the length + width of your body to customize the massage.</i>
	Shut Down	Power off
Time	Increase Time	5, 10, 15, 20, 25, 30 min options
Bluetooth	Turn On Bluetooth	Turn on/off Discoverable as "AMY" on your device
Heating	Heating Mode	Lumbar heating on/off
Roller	Open The Roller	Turn on foot rolling function

LCD PANEL SCREEN REMOTE


FUNCTIONS & INSTRUCTION GUIDE

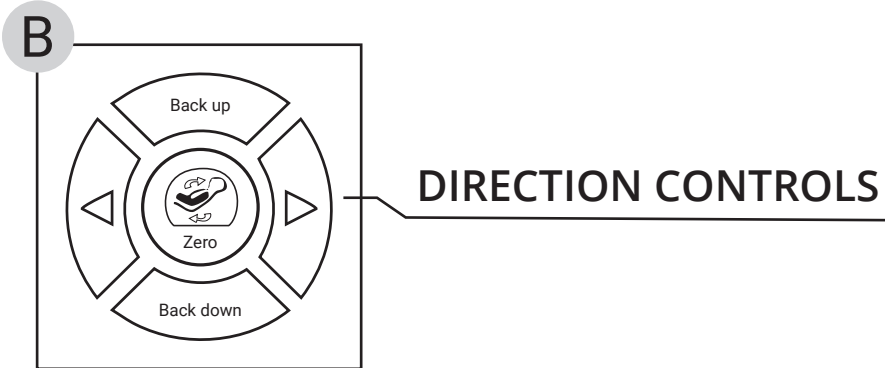

Button	Voice Commands	Functions
Back Up	Back Up	Move Chair Upright
Back Down	Back Down	Recline Chair
Zero Gravity	Zero Gravity	Full Recline, 170°
Left Arrow		Leg Rest Rise
Right Arrow		Leg Rest Lower

LCD PANEL SCREEN REMOTE

FUNCTIONS & INSTRUCTION GUIDE

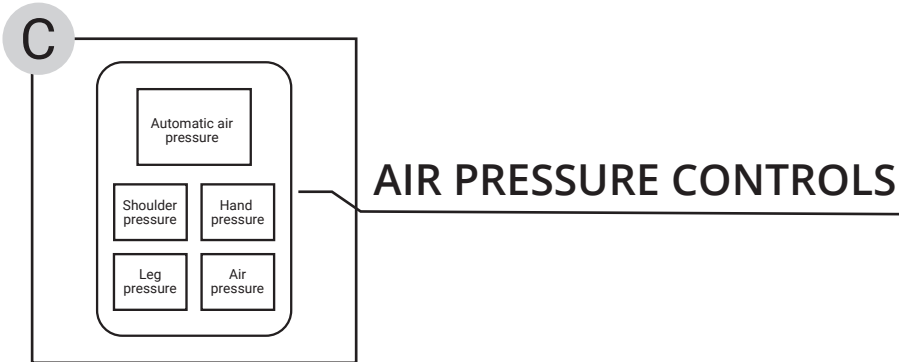


Button	Voice Commands	Functions
Automatic Air Pressure	Automatic Air Pressure	All airbags inflate and decompress in a dynamic pattern
Shoulder Pressure	Shoulder Pressure	Only shoulder airbags
Hand Pressure	Hand Pressure	Only arm airbags
Leg Pressure	Leg Pressure	Only leg and foot airbags
Air Pressure		3 levels of intensity

LCD PANEL SCREEN REMOTE

FUNCTIONS & INSTRUCTION GUIDE

D

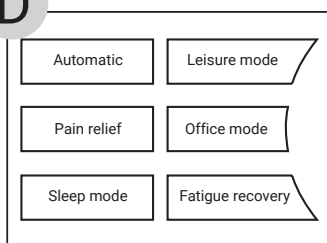

AUTOMATIC MODES


The Vitality 4D offers 12 pre-programmed massage modes, each tailored to a specific purpose. All modes include the zero-gravity function.

Button	On Screen	Mode/Voice Commands	Function
Automatic	Click For:		
	A 06	Easy Massage	Light, full-body relaxation
	A 07	Shoulder Focus	Intense massage targeting shoulder tension
	A 08	Waist Relief	Mid back focus
	A 09	Lumbar Relaxation	Lower back and glute focus
	A 10	Awaken Vitality	Energizing circulation massage
	A 11	Queen Slim	Gentle lymphatic drainage massage
	A 12	Exercise Recovery	Deep muscle relief for athletes
Pain Relief	A 01	Pain Relief	Deep massage in common pain areas
Leisure Mode	A 02	Leisure Mode	Firm full-body massage
Office Mode	A 03	Office Mode	Relieves muscles from computer posture strain
Sleep Mode	A 04	Sleep Mode	Prepare body for a peaceful night's rest
Fatigue Recovery	A 05	Fatigue Recovery	Full body yoga stretching and energizing

LCD PANEL SCREEN REMOTE

FUNCTIONS & INSTRUCTION GUIDE

E

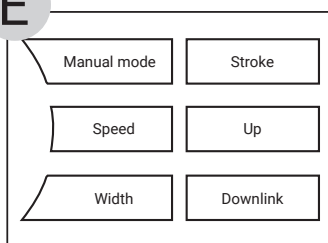

MANUAL MODES


Experience therapist-level precision with customizable massage techniques, focus areas, fixed-points, width, and speed.

Button	On Screen	Mode/Voice Commands	Function
Manual Mode	Click For:		
	H1	Kneading	Circular motion <i>Swedish petrissage technique</i>
	H2	Kneading & Pounding	Combination
	H3	Pounding	Vibration + Spine rolling <i>Swedish percussion/tapotement technique</i>
	H4	Double Finger Press	Deep tissue trigger point rolling up and down– <i>Shiatsu technique</i>
	H5	Gentle Pounding	Gentler and slower pounding & rolling pressure
	H6	Kneading & Double Finger Press	Combination
Stroke	Click For:		
	Orange Circle & Arrows	Full Body Massage	Massage moves up and down entire length of body
	Arrows	Focus Area Massage	Massage moves up and down within one region (region in which is stopped)
	Orange Circle	Fixed-Point Target Massage	Massage stays in one spot (location in which it is stopped)

Continued on the next page

LCD PANEL SCREEN REMOTE

FUNCTIONS & INSTRUCTION GUIDE

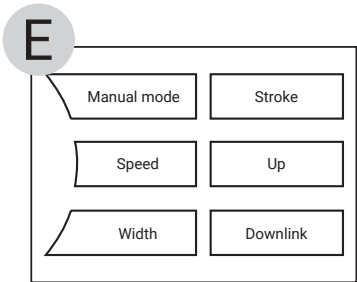


MANUAL MODES

Experience therapist-level precision with customizable massage techniques, focus areas, fixed-points, width, and speed.

Button	On Screen	Mode/Voice Commands	Function
Speed		For Pounding & Kneading	3 Speed levels
Width		Move Massage Closer Or Further From Spine	3 Width levels
Up		Stroke Up	Move focus area massage region up
Downlink		Stroke Down	Move focus area massage region down

QUICK SHORTCUT REMOTE

DIAGRAM OF SHORTCUT REMOTE

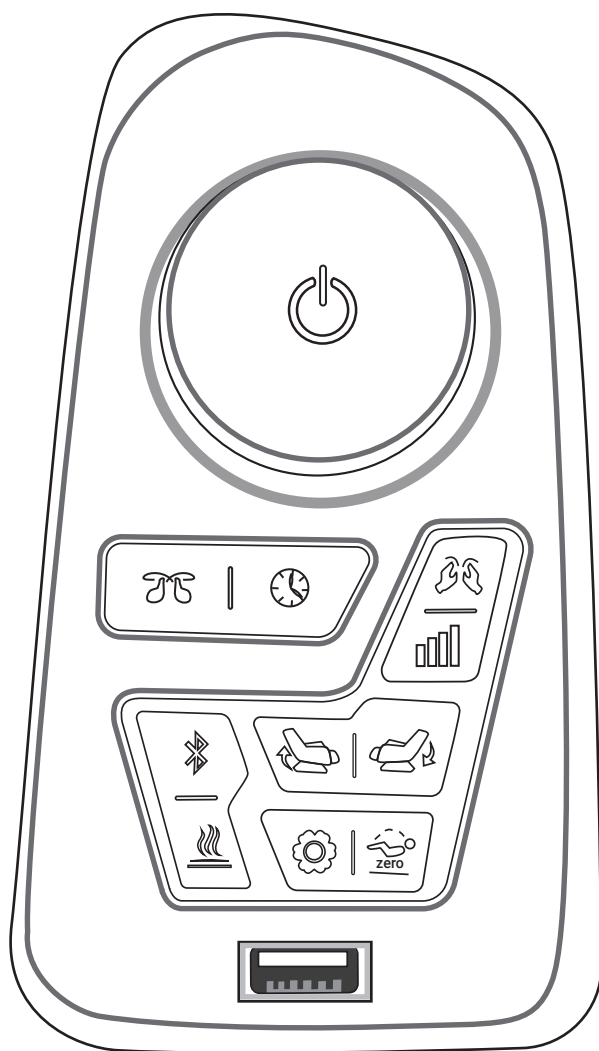


(see next page for remote icons functions)

QUICK SHORTCUT REMOTE

FUNCTIONS & INSTRUCTION GUIDE


Power
Turn chair on/off

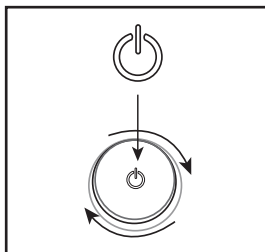

Air Pressure Dial

Turn right: Increase air pressure
Turn left: Decrease air pressure

Automatic Modes
Press to switch between 12 modes



Time (5-30min)

Press to switch between 6 modes


Manual Modes
Press to switch between 6 modes



Massage Speed

3 Speed levels


Back Up
Hold to move chair upright

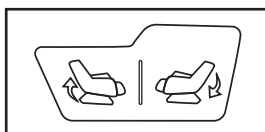

Back Down

Hold to recline chair


Foot Roller Speed
3 speed levels and off

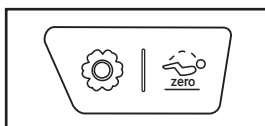

Zero Gravity

Full recline, 170°


Bluetooth
On/Off

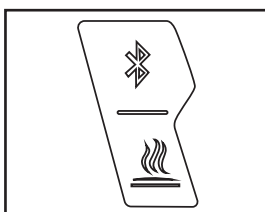

Heat

On/Off

USB
Charge phone



AI VOICE CONTROL

INSTRUCTION GUIDE PART ONE

Please say: "Hello massage chair" before saying each voice command.
This will awaken the voice control function.

Example: "Hello massage chair" - "Hello" - "Power on"

To Activate Voice Control Functions	Chair Response
Hello Massage Chair	Hello

Voice Commands	Chair Response
Power On	OK, turn on the massage. I'm glad to serve you
Shut Down	OK, turn off the massage and look forward to serving you again
Increase Time	OK, increase time
Turn On Bluetooth	OK, turn on bluetooth
Heating Mode	OK, heating mode
Open The Roller	OK, open the roller
Back Up	OK, back up
Back Down	OK, back down
Zero Gravity	OK, zero gravity
Automatic Air Pressure	OK, automatic air pressure
Shoulder Pressure	OK, shoulder pressure
Hand Pressure	OK, hand pressure
Leg Pressure	OK, leg pressure

AI VOICE CONTROL

INSTRUCTION GUIDE PART TWO

Please say: "Hello massage chair" before saying each voice command.
This will awaken the voice control function.

Example: "Hello massage chair" - "Hello" - "Power on"

Voice Commands	Chair Response
Easy Massage	OK, it has been executed for you
Shoulder Focus	OK, it has been executed for you
Waist Relief	OK, it has been executed for you
Lumbar Relaxation	OK, it has been executed for you
Awaken Vitality	OK, it has been executed for you
Queen Slim	OK, it has been executed for you
Exercise Recovery	OK, it has been executed for you
Pain Relief	OK, it has been executed for you
Leisure Mode	OK, it has been executed for you
Office Mode	OK, it has been executed for you
Sleep Mode	OK, it has been executed for you
Fatigue Recovery	OK, it has been executed for you

DIMENSIONS & SPECIFICATIONS

LUXX VITALITY 4D PART ONE

WEIGHT

Luxx Vitality 4D	
Weight Of The Unit Inside The Box	Approx. 205lb

DIMENSIONS

Luxx Vitality 4D	
Dimensions Of The Box	49.61" H x 29.92" W x 42.52" L

CHAIR DIMENSIONS

Measurements	Luxx Vitality 4D
Dimensions (Upright)	42" H x 57" L x 29" W
Dimensions (Reclined/Zero Gravity Mode)	33" H x 69" L x 29" W
Backrest Height	40"
Inside Armrest To Armrest Width	26"
Inside Seat Width	21.5"
Seat To Inside Bottom Of Footrest	18"
Footrest Extensions	Up to 4.5"

USER ATTRIBUTES

Capacity Measurements	User
Recommended Maximum Height	6'1"
Maximum Weight Capacity	300lb

DIMENSIONS & SPECIFICATIONS

LUXX VITALITY 4D PART TWO

SPECIFICATIONS

Category	Specification
Massage Chair Model	Luxx Vitality 4d Zero Gravity Massage Chair
Rated Voltage	Ac100-240v, 50/60hz
Rated Power	120w
Electrical Safety Classification Type	Class 1
Working Time	15 Minutes
Execution Standards	Gb4706.1-2005, Gb4706.10-2008

SAFETY & MAINTENANCE GUIDELINES

SAFETY GUIDELINES

SAFETY GUIDELINES

Medical Conditions: Do not use the chair if you have medical implants, injuries, or conditions without consulting a physician

Automatic Program Movement: The massage chair automatically adjusts its angle during use. Stay clear of gaps to avoid injuries.

Power Source Compatibility: Use only AC 100-240V/50-60Hz power sources. Avoid wrapping the power cord around the chair to prevent electric shock, short circuits, or fire.

Child/Pet Safety: Do not let children or pets play on or ride the chair to avoid injuries or machine malfunctions.

Obstructions During Recline: Ensure there are no people, pets, or objects beneath the rear or leg massage components adjusting the recline position.

Clothing Requirement: Do not use the chair while naked to prevent skin irritation or damage.

Proper Usage: Use the chair only as intended and described in the manual. Avoid sitting on the legs or handrail components to prevent accidents.

Disassembled or Damaged Chair: Do not use the chair if it is broken or disassembled to prevent injuries or further damage.

Wet Hands Warning: Never touch the power socket, plug, or cord with wet hands to avoid electric shock.

Keep Away from Heat Sources: Keep the product away from open flames, heaters, heated floors, or direct sunlight for extended periods of time to prevent overheating or damage.

Refrain from Smoking: Do not smoke while using the product to reduce the risk of fire.

SAFETY & MAINTENANCE GUIDELINES

ADDITIONAL NOTICES & MAINTENANCE

ADDITIONAL NOTICES & MAINTENANCE

Power Off When Not in Use: Always turn off the power switch and unplug the chair when not in use to prevent electrical leakage or fire hazards. Allow the product to rest between uses; do not run it continuously for long periods.

Extended non-use: If not in use for an extended period, store the power cord neatly and place the product in a dry, dust-free environment.

Unplugging Safely: When disconnecting the power, always grip the plug itself and avoid pulling on the cord to prevent damage or accidents.

Cleaning Precautions: Before cleaning, turn off the power switch and unplug the chair to prevent fire or electric shock. Avoid using thinners, benzene, or alcohol for cleaning. Avoid spilling water or other liquids on the chair or remote controller.

Routine Checks: Inspect power cords, rollers, and airbags for wear or damage.

Disassembled or Damaged Chair: Do not use the chair if it is broken or disassembled to prevent injuries or further damage.

Repairs: Reach out to Luxx Massage Chairs for manufacturer or factory damage under your warranty. Do not disassemble or attempt repairs yourself.

SAFETY & MAINTENANCE GUIDELINES

LCD PANEL SCREEN REMOTE PRECAUTIONS

LCD PANEL SCREEN REMOTE PRECAUTIONS

DO NOT operate the remote with wet hands.

DO NOT hang heavy objects on the power cord or hand-control line. Ensure the hand controller is not subjected to impacts or dropped to avoid malfunction, electric shock, or fire hazards.

AVOID sitting, stepping on, or pulling the remote or its cord.

DO NOT press or touch the panel with sharp or hard objects, as this may cause damage.

SAFETY & MAINTENANCE GUIDELINES

TROUBLESHOOTING

TROUBLESHOOTING

Issue	Possible Cause	Solution
Chair Won't Power On	The power plug is not inserted into the socket or is loose.the power switch is not on.	Check the power cord and outlet. Check the power switch on the back of the chair near the floor and turn it on.
The Massage Suddenly Stops	The chair has completed it's 15- or 20-minute session and switched to standby mode. Overuse has caused the motor to overheat, triggering safety protection.	If the session has ended, press the power button again to restart the massage function. If the motor has overheated, turn off the chair, unplug it, and allow the motor to cool down before using it again.
Sounds During Operation	Airbag inflation or deflation Sounds. Solenoid valve Switching sounds. Pump Operation sounds	These sounds are normal and indicate the chair is functioning properly. No action is needed
Body Scan Not Working	Obstruction on the seat	Clear any objects from the chair
Heat Function Not Activating	Feature not toggled	Ensure the heat button is activated
Airbags Not Inflating	Low intensity setting	Increase airbag intensity
Bluetooth Not Connecting	Bluetooth function has not been enabled on both the chair and your device. Bluetooth is connected to another device.	Press the bluetooth button on the control panel to turn it on. Turn on bluetooth in your device settings and click "AMY" to connect. Disconnect the previous device and pair to the new device.

WARRANTY AND SUPPORT

Your **LUXX VITALITY 4D ZERO GRAVITY MASSAGE CHAIR** comes with a limited one year warranty.

For support or questions, please contact us at:

Email: info@luxxmassagechairs.com

Phone: (778) 917 - 5496

Website: luxxmassagechairs.com

Thank you for choosing *Luxx Massage Chairs*.

